




WELCOME TO THE WORLD OF SANYO

Thank you for purchasing a Sanyo Multimedia Remote Control. You made an excellent choice for Performance, Reliability, Value, and Styling.

Model RMT-U340

6-Function Multimedia Remote Control Owner's Manual

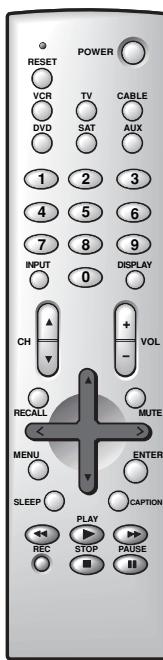


Need assistance? Visit our web site at www.sanyoctv.com.

BEFORE YOU BEGIN

Installing The Batteries

- Step 1.** Release the battery cover by pressing the tab. Then tilt the cover upward.
- Step 2.** Install two "AAA" batteries as shown. Be sure to match the +/ signs on the batteries with the +/- marks inside the case.

Note: **Do Not** mix new and used batteries or mix different types of batteries together.

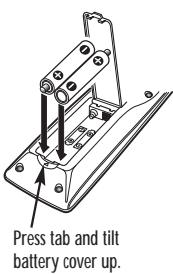

IMPORTANT NOTE: SPENT OR DISCHARGED BATTERIES MUST BE RECYCLED OR DISPOSED OF PROPERLY IN COMPLIANCE WITH ALL APPLICABLE LAWS. FOR DETAILED INFORMATION, CONTACT YOUR LOCAL COUNTY SOLID WASTE AUTHORITY.

PROGRAMMING THE REMOTE CONTROL

Step 1. Find your TV, VCR, DVD, Cable Box, and Satellite Receiver brand codes in the charts on pages 3 ~ 7.

Step 2. Press and hold the **TV**, **VCR**, **CABLE**, **DVD**, **SAT (Satellite)**, or **AUX (Auxiliary)** mode key while entering a three-digit code number. Then release the mode key.


If the code was accepted, the **Activity Lamp** will flash 5 times after the Mode key is released. If you entered an invalid code, the **Activity Lamp** will not flash. Check the code number and repeat Step 2.

The **VCR**, **TV**, **Cable Box**, **DVD**, and **Satellite** modes will accept only each mode's specific code type.

The **AUX** mode will accept all code types, but only one code at a time.

Perform Steps 1 and 2 for each piece of equipment you have. After entering each code number check the unit's operation by pressing the **Power** and/or **Channel** keys. If these keys operate your equipment, you have probably entered the correct code number for that device. If not, follow Steps 1 and 2 and enter another code, if available.

After you have programmed the remote control and confirmed its operation, enter your codes in the spaces provided below for easy reference.



OPERATING TIPS AND TROUBLESHOOTING HINTS

- To operate each device (**VCR**, **TV**, **Cable Box**, **DVD Player**, or **Satellite Receiver**), you must first program the remote control; then press the proper mode key (**VCR**, **TV**, **CABLE**, **DVD**, **SAT**, or **AUX**) to select an operating mode. The **VCR**, **TV**, and **DVD** modes are preprogrammed with Sanyo codes.
- Some manufacturers use many different codes. If your brand of equipment has more than one code listed, try programming your remote with the different available codes until you locate the correct one for your device.
- There may be VCRs, TVs, DVDs, Cable Converter Boxes, and Satellite Receivers that this remote control cannot operate. Some models may operate only partially.
- Codes will remain in memory for five minutes as you replace batteries.
- Remove batteries from the remote control if it will not be used for a month or more. Weak batteries may leak and damage the remote control.
- This remote control uses an invisible (infrared) beam of light to operate the equipment. Objects between the equipment and the remote control can block the beam of light. Therefore, the remote control must be pointed directly at the equipment you want to operate.
- This remote control *cannot* add keys or features to your equipment. Your equipment's manufacturer must have originally provided them.
- When switching from the **VCR** or **DVD** mode to the **TV** mode, the **VCR/DVD** specific control keys will continue to operate the last device (mode) selected. For example, when switching from **DVD** to **TV** mode, the **VCR/DVD** control keys will continue to function as **DVD** keys.
- Replace the batteries if the remote control fails to operate any of your equipment. Be sure to install batteries correctly.
- Many of the remote control keys are multi-functional. Refer to the chart on the inside of the carton for a brief description of the keys and their functions. Refer to your original operating manuals for specific feature operation.

Television Codes



Admiral	130, 137, 138, 152, 100, 103, 105, 113, 114, 115, 118, 124, 129, 155
Aiwa	163, 100, 139
Akai	143, 101, 102, 110, 111, 122, 133
America Action	103
Anam	103
AOC	101, 102, 111, 133
Apex	159, 157
Audiovox	151, 154, 103, 105
Baysonic	103
Beaumark	102, 114, 133
Belcor	101, 111
Bell & Howell	113, 114, 115, 129, 137
Bradford	103
Broksonic	162, 160, 152, 101, 102, 104, 111, 113, 115, 116, 133
Brokwood	101, 111
Candle	132, 136, 101, 102, 103, 111, 113, 115, 117, 121, 133, 143, 148
Carver	113, 115
Celebrity	110
Cineral	151
Citizen	101, 102, 111, 121, 133, 148
Concerto	148
Contec	103
Craig	103, 105, 117, 143
Cranivale	102, 133
Crosley	113, 115
Crown	132, 103, 111, 117, 101
Curtis Matthes	132, 137, 151, 101, 102, 105, 111, 113, 115, 118, 124, 133, 138, 143, 148
CXC	103
Daewoo	154, 150, 151, 101, 102, 107, 111, 121, 132, 133, 136, 139
Daytron	101, 111, 132, 136
Dumont	101, 114
Electroband	110
Electrohome	101, 111, 132
Emerson	104, 154, 101, 102, 103, 105, 111, 112, 116, 117, 129, 132, 133, 142, 143, 148, 150, 152
Envision	102, 133
Fisher	100
Funai	104, 103, 105
Futuretech	103
GE	126, 156, 118, 124, 125, 138, 150, 151, 132, 135, 148, 101, 103, 107, 111, 123, 143, 144
Gibralter	101, 102, 111, 114, 133
GoldStar	132, 133, 138, 148, 101, 102, 111, 114, 155
Gradiente	121, 148
Grumpy	103
Hallmark	148, 144
Harman/Kardon	113, 115
Harvard	103
Hitachi	141, 132, 135, 136, 137, 101, 102, 111, 118, 123, 124, 129, 133, 148
Infinity	113, 115
Inteq	114
JBL	102, 113, 115, 133
JCB	110
JVC	121, 123, 143
KEC	103
Kenwood	101, 102, 133, 111
Konka	158
KTV	132, 101, 102, 103, 105, 111, 133
LG	132, 133, 138, 148, 101, 102, 111, 114, 155
Luxman	148
LXI	104, 131, 138, 148, 100, 101, 102, 111, 113, 115, 118, 124, 133
Magnasonic	131, 136, 101, 102, 111, 113, 115, 129, 133
Magnavox	113, 115, 145, 149, 132, 133, 135, 101, 102, 104, 111, 112, 117, 121, 123, 129
Majestic	137
Marantz	102, 113, 115, 133
Megatron	148, 144
Memorex	137, 148, 152, 100, 111, 122, 101
MGA	148, 101, 102, 111, 122, 133, 144
Midland	101, 111, 114, 118, 124
Mitsubishi	122, 132, 133, 148, 101, 102, 111, 114
MTC	136, 101, 102, 111, 113, 115, 133, 143, 148
MGA	148, 101, 102, 111, 122, 133, 144
Midland	101, 111, 114, 118, 124
Mitsubishi	122, 132, 133, 148, 101, 102, 111, 114
MTC	136, 101, 102, 111, 113, 115, 133, 143, 148
MGA	148, 101, 102, 111, 122, 133, 144
Midland	101, 111, 114, 118, 124
Mitsubishi	122, 132, 133, 148, 101, 102, 111, 114
MTC	136, 101, 102, 111, 113, 115, 133, 143, 148
MGA	148, 101, 102, 111, 122, 133, 144
Midland	101, 111, 114, 118, 124
Mitsubishi	122, 132, 133, 148, 101, 102, 111, 114
MTC	136, 101, 102, 111, 113, 115, 133, 143, 148
MGA	148, 101, 102, 111, 122, 133, 144
Midland	101, 111, 114, 118, 124
Mitsubishi	122, 132, 133, 148, 101, 102, 111, 114
MTC	136, 101, 102, 111, 113, 115, 133, 143, 148
MGA	148, 101, 102, 111, 122, 133, 144
Midland	101, 111, 114, 118, 124
Mitsubishi	122, 132, 133, 148, 101, 102, 111, 114
MTC	136, 101, 102, 111, 113, 115, 133, 143, 148
MGA	148, 101, 102, 111, 122, 133, 144
Midland	101, 111, 114, 118, 124
Mitsubishi	122, 132, 133, 148, 101, 102, 111, 114
MTC	136, 101, 102, 111, 113, 115, 133, 143, 148
MGA	148, 101, 102, 111, 122, 133, 144
Midland	101, 111, 114, 118, 124
Mitsubishi	122, 132, 133, 148, 101, 102, 111, 114
MTC	136, 101, 102, 111, 113, 115, 133, 143, 148
MGA	148, 101, 102, 111, 122, 133, 144
Midland	101, 111, 114, 118, 124
Mitsubishi	122, 132, 133, 148, 101, 102, 111, 114
MTC	136, 101, 102, 111, 113, 115, 133, 143, 148
MGA	148, 101, 102, 111, 122, 133, 144
Midland	101, 111, 114, 118, 124
Mitsubishi	122, 132, 133, 148, 101, 102, 111, 114
MTC	136, 101, 102, 111, 113, 115, 133, 143, 148
MGA	148, 101, 102, 111, 122, 133, 144
Midland	101, 111, 114, 118, 124
Mitsubishi	122, 132, 133, 148, 101, 102, 111, 114
MTC	136, 101, 102, 111, 113, 115, 133, 143, 148
MGA	148, 101, 102, 111, 122, 133, 144
Midland	101, 111, 114, 118, 124
Mitsubishi	122, 132, 133, 148, 101, 102, 111, 114
MTC	136, 101, 102, 111, 113, 115, 133, 143, 148
MGA	148, 101, 102, 111, 122, 133, 144
Midland	101, 111, 114, 118, 124
Mitsubishi	122, 132, 133, 148, 101, 102, 111, 114
MTC	136, 101, 102, 111, 113, 115, 133, 143, 148
MGA	148, 101, 102, 111, 122, 133, 144
Midland	101, 111, 114, 118, 124
Mitsubishi	122, 132, 133, 148, 101, 102, 111, 114
MTC	136, 101, 102, 111, 113, 115, 133, 143, 148
MGA	148, 101, 102, 111, 122, 133, 144
Midland	101, 111, 114, 118, 124
Mitsubishi	122, 132, 133, 148, 101, 102, 111, 114
MTC	13



Model RMT-U340

6-Function Multimedia Remote Control Owner's Manual

Besoin d'aide ? Visitez notre site web à www.sanyoctv.com.

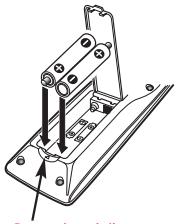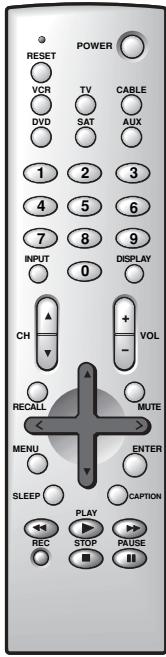

BIENVENUE DANS L'UNIVERS DE SANYO

Nous vous remercions d'avoir acheté un téléviseur Sanyo. Vous avez fait un choix excellent du point de vue du fonctionnement du style, de la fiabilité et du rapport qualité/prix.

BEFORE YOU BEGIN

Installation del plies

Step 1. Release the battery cover by pressing the tab. Then tilt the cover upward.

Step 2. Install two "AAA" batteries as shown. Les signes + et - des piles doivent correspondre à ceux de l'intérieur de la télécommande.

Remarque : N'utilisez pas en même temps des piles usagées et des piles neuves ni des piles de types différents.

PROGRAMMATION DE LA TÉLÉCOMMANDE

Étapes 1. Look in the codes chart for your TV, VCR, DVD, Cable Box, and Satellite Receiver brand codes.

Étapes 2. Press and hold the **TV, VCR, CABLE, DVD, SAT (Satellite), or AUX (Auxiliary)** mode key while entering a three-digit code number. Then release the mode key.

If the code was accepted, the **Activity Lamp** will flash 5 times after the Mode key is released. If you entered an invalid code, the **Activity Lamp** will not flash. Check the code number and repeat Step 2.

Les modes **VCR, TV, CABLE, DVD, et SAT** accepteront seulement des codes de type.

The **AUX** mode will accept all code types, but only one code at a time.



90-DAY LIMITED WARRANTY

THIS LIMITED WARRANTY IS VALID ONLY ON SANYO PRODUCTS PURCHASED AND USED IN THE UNITED STATES OF AMERICA AND PUERTO RICO, HOWEVER, EXCLUDING ITS OTHER TERRITORIES AND PROTECTORATES. THIS LIMITED WARRANTY APPLIES ONLY TO THE ORIGINAL PURCHASER, AND DOES NOT APPLY TO PRODUCTS USED FOR INDUSTRIAL OR COMMERCIAL PURPOSES.

FOR 90 DAYS from the date of purchase, Sanyo Manufacturing Corporation will replace any defective unit without charge to the original purchaser.

To ensure proper warranty exchange, keep the original sales receipt for evidence of purchase. Return the defective remote control along with the receipt to the retailer. The defective remote control will be exchanged for the same model, or a replacement model of equal or greater value, if necessary. Replacement model will be contingent on availability and at the sole discretion of Sanyo Manufacturing Corporation.

LA GARANTIE SUSMENTIONNÉE EST EXCLUSIVE ET REMPLACE TOUTE AUTRE GARANTIE DE VALEUR MARCHANDE OU D'APTITUDE À UNE UTILISATION PARTICULIÈRE.

OBLIGATIONS

For 90 days from the date of purchase, Sanyo Manufacturing Corporation warrants this product to be free from defects in material and workmanship under normal use and conditions. Should replacement be necessary under this warranty for any reason due to manufacturing defect or malfunction during the first 90 days from date of original purchase, Sanyo Manufacturing Corporation will provide a new remote control via exchange at the retailer at no charge.

Cette garantie énonce des droits contractuels spécifiques; les acheteurs au détail peuvent bénéficier d'autres droits légaux qui varient d'une province à l'autre.



Sanyo Manufacturing Corp.
3333 Sanyo Road, Forrest City, AR 72335
(EFFECTIVE: January 1, 2002)

Television Codes

Admiral	130, 137, 138, 152, 100, 103, 105, 113, 114, 115, 118, 124, 129, 155
Alwa	163, 100, 139
Akai	143, 101, 102, 110, 111, 122, 133
America Action	103
Anam	103
AOC	101, 102, 111, 133
Apex	159, 157
Audiovox	151, 154, 103, 105
Baysonic	103
Beaumark	102, 114, 133
Belcor	101, 111
Bell & Howell	113, 114, 115, 129, 137
Bradford	103
Broksonic	162, 160, 152, 101, 102, 104, 111, 113, 115, 116, 133
Brokwood	101, 111
Candle	132, 136, 101, 102, 103, 111, 113, 115, 117, 121, 133, 143, 148
Carver	113, 115
Celebrity	110
Cineral	151
Citizen	101, 102, 111, 121, 133, 148
Concerto	148
Contec	103
Craig	103, 105, 117, 143
Cranivale	102, 133
Crosley	113, 115
Crown	132, 103, 111, 117, 101
Curtis Matthes	132, 137, 151, 101, 102, 105, 111, 113, 115, 118, 124, 133, 138, 143, 148
CXC	103
Daewoo	154, 150, 151, 101, 102, 107, 111, 121, 132, 133, 136, 139
Daytron	101, 111, 132, 136
Dumont	101, 114
Electroband	110
Electrohome	101, 111, 132
Emerson	104, 154, 101, 102, 103, 105, 111, 112, 116, 117, 129, 132, 133, 142, 143, 148, 150, 152
Envision	102, 133
Fisher	100
Funai	104, 103, 105
Futuretech	103
GE	126, 156, 118, 124, 125, 138, 150, 151, 132, 135, 148, 101, 103, 107, 111, 123, 143, 144
Gibralter	101, 102, 111, 114, 133
GoldStar	132, 133, 138, 148, 101, 102, 111, 114, 155
Gradiente	121, 148
Grunpy	103
Hallmark	148, 144
Harman/Kardon	113, 115
Harvard	103
Hitachi	141, 132, 135, 136, 137, 101, 102, 111, 118, 123, 124, 129, 133, 148
Infinity	113, 115
Inteq	114
JBL	102, 113, 115, 133
JCB	110
JVC	121, 123, 143
KEC	103
Kenwood	101, 102, 133, 111
Konka	158
KTV	132, 101, 102, 103, 105, 111, 133
LG	132, 133, 138, 148, 101, 102, 111, 114, 155
Lokik	114, 137
Luxman	148
LXI	104, 131, 138, 148, 100, 101, 102, 111, 113, 115, 118, 124, 133
Magnasonic	131, 136, 101, 102, 111, 113, 115, 129, 133, 148
Magnavox	113, 115, 145, 149, 132, 133, 135, 101, 102, 104, 111, 112, 117, 121, 123, 129
Majestic	137
Marantz	102, 113, 115, 133
Megatron	148, 144
Memorex	137, 148, 152, 100, 111, 122, 101
MGA	148, 101, 102, 111, 122, 133, 144
Midland	101, 111, 114, 118, 124
Mitsubishi	122, 132, 133, 148, 101, 102, 111, 114
MTC	136, 101, 102, 111, 113, 115, 133, 143, 148
Multitech	103
NAD	131, 148, 144
NEC	101, 102, 111, 112, 133, 148
Newtech	100
Nikko	102, 133, 148
Onwa	103
	NOM DU DISPOSITIF ICI

Television Codes

Optonica	147
Orion	142, 152, 105, 116
Panasonic	139, 135, 136, 105, 107, 112, 118, 123, 124
Penny	131, 132, 138, 101, 102, 111, 118, 123, 124, 133, 143, 148, 155
Philco	113, 115, 145, 132, 133, 136, 152, 101, 102, 111, 112, 117, 121, 129
Philips	113, 115, 145, 132, 133, 101, 102, 111, 112, 117, 121, 129
Pilot	101, 102, 111, 133
Pioneer	135, 107, 108, 111, 112, 101
Proscan	126, 156, 118, 124, 125, 138, 102, 133, 155
Proton	132, 148, 101, 102, 111, 117, 118, 124, 133, 144
Portland	101, 111
Pulsar	101, 111, 114, 136
Quasar	139, 135, 147, 107, 112, 123
Radio Shack	100, 101, 102, 103, 105, 107, 111, 113, 115, 118, 122, 124, 130, 132, 133, 144
RCA	161, 126, 156, 118, 124, 125, 125, 138, 132, 135, 101, 102, 103, 107, 108, 111, 133, 143, 148
Realistic	147, 148, 100, 101, 103, 111, 133
Runco	102, 114, 133
Samsung	104, 132, 148, 101, 102, 103, 105, 111, 121, 129, 133, 144
Samsux	111, 101
Sansui	142, 152
Sansei	151
Sanyo	100
Scimtsu	101, 111
Scotch	148, 144
Scott	131, 132, 148, 101, 103, 105, 111, 113, 115, 116, 118, 124, 144
Sears	131, 132, 148, 100, 101, 102, 104, 113, 115, 124, 111, 118, 133, 155
Semivox	103
Semp	131
Sharp	130, 132, 147, 110, 111, 129, 101
Shogun	101, 111
Signature	130, 137
Simpson	149
Sony	110, 132
Soundesign	103, 148, 144
Squareview	104
SSS	101, 103, 111
Starlite	103
Supreme	110
Sylvania	104, 133, 136, 145, 101, 102, 111, 112, 113, 115, 117, 121
Symphonic	104, 105
Tandy	145
Tatung	107
Technics	135, 112, 123
Teckwood	148
Teknika	132, 136, 137, 101, 102, 103, 105, 111, 113, 115, 117, 122, 133, 148
Telefunken	148
Toshiba	131, 130, 121, 143
Totemvision	111, 101
TMK	148
Vector Research	102, 133
Victor	121
Vidikron	113, 115
Vidtech	141, 148, 101, 102, 111, 133
Wards	137, 145, 147, 148, 101, 102, 111, 113, 114, 115, 117, 118, 121, 124, 129, 133, 143
W. Westinghouse	151, 152, 154, 100, 103, 116
Yamaha	136, 101, 102, 112, 11